

Organize your craft. Unleash your creativity!

Wall Mount Instructions | Attaching the Wood Cleat

IMPORTANT NOTES:

- Our products (whether Punch Holder, Ink Pad Holder, Combo Holder or Shelves) will be **VERY** heavy when fully loaded.
- User assumes **ALL** responsibility to ensure these instructions are followed carefully and the Product Cleat is securely attached.
- *You can view this in a video available at stampnstorage.com under the "Helpful Info" link at the bottom of the page*

<p><u>Included in this kit:</u></p> <p>Product Cleat (long, narrow board) Offset Blocks (square pieces) Wall Cleat (long board w/holes) Fasteners (see separate instructions)</p>	<p><u>You will need:</u></p> <p>Wood Glue Brad Nailer with 3/4" or 1" nails - or - Heavy object(s) for clamping Sandpaper (120 Grit)</p>
--	---

Step 1 – Attach the Product Cleat

- Identify the top side of your cabinet and flip the product over
- The Product Cleat (long, narrow board) has one edge cut at an angle, making one side wider and the other side narrow. Apply glue to the narrow side of the Product Cleat on the
- Carefully align the Product Cleat to the top and sides of the cabinet. The angled side of the Product Cleat should be facing the bottom of the cabinet.
- Recommended: Secure the Product Cleat to the cabinet with nails every 4-6"
NOTE: Take care that the nails are straight and do not come out through the sides of the cabinet
- Alternate: Place heavy objects on top of the Product Cleat for one hour while the glue dries
- Wipe off any excess glue around the Product Cleat with a damp cloth

Glue on Narrow Side




Secure Narrow Side Down



Nail or Clamp Down



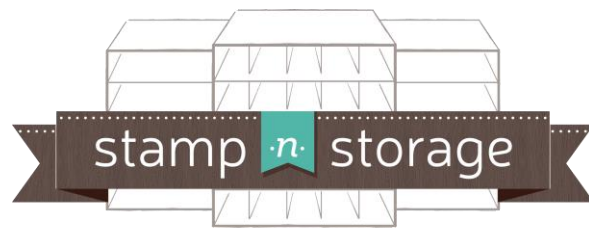

Organize your craft. Unleash your creativity!

Step 2 – Attach the Offset Blocks

- Apply glue to one side of the Offset Blocks.
- Align the Offset Blocks in the bottom corners of the cabinet.
- NOTE: For best appearance, we recommend lining them up with the edge of the inset back, not with the edge of the cabinet.
- Place heavy objects on top of the Offset Blocks for one hour while the glue dries
- Wipe off any excess glue around the Offset Blocks with a damp cloth

Glue on Offset Block



Nail or Clamp Down



Complete!



Step 3 – Touch-up Sanding

- Using 120 grit sandpaper, smooth any rough edges and remove any glue spots

Step 4 – You're Ready to Wall Mount

- Time to hang your cabinet from the wall!
- You'll need the fasteners and Wall Mount Instruction Sheet.