

# Wall Mount Instructions

# **IMPORTANT NOTES:**

- Our products will be VERY heavy when fully loaded.
- User assumes ALL responsibility for proper wall mounting.
- You must make sure that the mounting cleat is **SECURELY** attached to your wall. Supplies have been provided for attaching to a sheetrock wall. If your wall is a different material (plaster, concrete, etc.) you should obtain the appropriate anchors for your wall.
- A video is available at stampnstorage.com under the "Helpful Info" link at the bottom of the page

Included in this kit:	You will need:
Wall Cleat	Level
Sheetrock Anchor	Tape Measure
Long Screw (gold color) & Short Screws (silver color)	Screw Driver


# Step 1 – Decide where to put it!

- Apply masking tape to the wall first to prevent marking the paint
- Mark the location of the top and two sides of your product
- Make sure line for top of unit is level



# Step 2 – Mark location of Wall Cleat

- Measure and mark 4" down from the top of the unit 1-2" in from each side
- Make sure marks are level. This marks the bottom edge of the Wal Cleat.

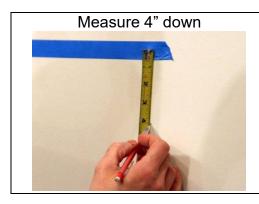





### Step 3 - Mark wall stud and screw hole locations, drill holes

- It is **STRONGLY** recommended that the mounting cleat is fastened to a stud for maximum security. Use a stud finder or other suitable method to identify their location.
- Hold the Wall Cleat in place (pencil marks on the bottom edge) and mark locations of all screw holes.
- The wall anchors provided require no pre-drilling. Use a Philips screwdriver to press the anchor into the drywall and turn it into place until flush with the surface.



### Step 4 – Attach Wall Cleat to wall and hang unit

- Place Wall Cleat on wall aligning pre-drilled holes with anchors and shorter side against the wall
- Drive the short screws (silver color), into the wall anchors
- Drive the long screw(s) (gold color) into stud locations. Align these screws with the silver screws vertically and drive them in until flush with Wall Cleat face.
- Hang unit on the wall cleat & enjoy!



Questions or comments? Contact us at www.stampnstorage.com

